

DMX CHART 8 BIT

| CHANNEL | CHANNEL MODE | CHANNELS |
|---------|--------------|----------|
| 1 | Dimmer | STANDARD |
| 2 | Effect | |
| 3 | Strobo Ton | ADVANCED |
| 4 | Strobo Toff | |
| 5 | PWM LED | |

| DMX CHANNEL | VALUE | PERCENT | FUNCTION |
|-------------|---------|---------|---|
| 1 | 0 - 255 | 0 - 100 | Dimming |
| 2 | 0 - 255 | - | 0 - 31 = DISABLE 32 - 63 = CANDLE 64 - 95 = THUNDER 96 - 127 = TV 128 - 159 = STROBO 160 - 191 = NEON 192 - 223 = PROGRESS 224 - 255 = PAPARAZZI |
| 3 | 0 - 255 | - | 0 - 2550 ms |
| 4 | 0 - 255 | - | 0 - 2550 ms |
| 5 | 0 - 255 | - | 0 - 42 = 1000 Hz 43 - 85 = 1500 Hz 86 - 127 = 2000 Hz 128 - 170 = HIFREQ 1 171 - 212 = HIFREQ 2 213 - 255 = HIFREQ 3 |

DMX CHART 16 BIT

| CHANNEL | CHANNEL MODE | CHANNELS |
|---------|--------------|----------|
| 1 | Dimmer | STANDARD |
| 2 | Dimmer fine | |
| 3 | Effect | ADVANCED |
| 4 | Strobo Ton | |
| 5 | Strobo Toff | |
| 6 | PWM LED | |

| DMX CHANNEL | | VALUE | PERCENT | FUNCTION |
|-------------|----|-----------|---------|---|
| HI | LO | 0 - 65535 | 0 - 100 | Dimming |
| 1 | 2 | | | |
| 3 | | 0 - 255 | - | 0 - 31 = DISABLE 32 - 63 = CANDLE 64 - 95 = THUNDER 96 - 127 = TV 128 - 159 = STROBO 160 - 191 = NEON 192 - 223 = PROGRESS 224 - 255 = PAPARAZZI |
| 4 | | 0 - 255 | - | 0 - 2550 ms |
| 5 | | 0 - 255 | - | 0 - 2550 ms |
| 6 | | 0 - 255 | - | 0 - 42 = 1000 Hz 43 - 85 = 1500 Hz 86 - 127 = 2000 Hz 128 - 170 = HIFREQ 1 171 - 212 = HIFREQ 2 213 - 255 = HIFREQ 3 |